

产品规格承认书

Product Specification Approval

产品名称 (Product Name) :	智能板三元 7 串 24V40A 同口带均衡 Smart BMS Li-ion 7S24V40A Common port with Balance	
产品型号 (Product Number) :	DL-R10K-L7S40ATJ	
客 户 名 (Customer Name) :		
客户料号 (Customer P/N) :		
送样日期 Sample delivery date	版次 Version	文件编号 Document No.
	A3	
编制(Prepared by)	核准(Approved)	审核(Audit)
赵希豪	林田生	冯耀辉
客户确认栏 Customer Confirmation Column		
确认意见 Confirm opinion:		
客户签章 Customer signature:		
日期 Date:		
注意 (Notice) :		



1.收到样机确认 OK 后请及时回签，7 天内没有回签及问题反馈，我司默认客户测试合格；规格书中的图片为通用机型图片，可能与送样样机有差异，此份规格书达锂电子保留最终解释权
After receiving the prototype confirmation, please sign back in time. If there is no sign back and problem feedback within 7 days, our company defaults that the customer test is qualified; specifications

2.客户批量前，请在规格书中签字回传，并说明详细功能说明，我司才安排批量
Before the customer batches, please sign the specification and return it, and explain the detailed function description, and our company will arrange the batch

目录 Table of contents

1. 简介 Introduction.....	第 3 页
2. 产品概述及特点 Product Overview and Features	第 3 页
3. 功能示意框图 Functional schematic block diagram	第 4 页
4. 电气特性 Electrical Characteristics	第 4 页
4.1 基本参数 Basic parameters.....	第 4~6 页
4.2 辅助模块参数 Auxiliary module parameters.....	第 6~7 页
4.3 可靠性参数 Reliability parameters.....	第 8 页
5.通信说明 Communication Description	第 8 页
5.1 RS485 通信 RS485 communication.....	第 9 页
5.2 CAN 通信 CAN communication.....	第 9 页
5.3 蜂鸣器逻辑 Buzzer logic.....	第 9 页
6.上位机说明 PC software Description	第 9 页
7.保护板尺寸图 Dimensional drawing of BMS.....	第 9~10 页
7.1 接口引脚说明 Interface pin instructions.....	第 10~11 页
7.2 主要线材说明 Main line material description.....	第 11~12 页
8.接线示意图 Wiring diagram.....	第 12 页
8.1 接线说明 Wiring Instructions.....	第 12 页
8.2 接线注意事项 Wiring Precautions.....	第 13 页
9.保修 Warranty.....	第 13 页
10.注意事项 Precautions.....	第 13~14 页
11.特别说明 Special Note.....	第 14 页



1.简介 Introduction

随着锂电池在锂电行业的广泛应用，对电池管理系统也提出了高性能、高可靠性及高性价比等要求。本产品是专门针对锂电池设计的 BMS，它能够实时采集、处理和存储电池组在使用过程中的信息数据，保证电池组的安全性、可用性和稳定性。

With the wide application of lithium batteries in the lithium battery industry, requirements for high performance, high reliability and high cost performance are also put forward for battery management systems. This product is a BMS specially designed for lithium batteries. It can collect, process and store the information and data of the battery pack in real time during use to ensure the safety, availability and stability of the battery pack.

2.产品概述及特点 (Product Overview and Features) :

- ◆ 使用专业大电流走线设计及工艺，能经受超大电流冲击

Using professional high-current trace design and technology, it can withstand the impact of ultra-large current

- ◆ 外观采用注塑密封工艺，提升防潮，防元器件氧化程度，延长产品使用寿命

The appearance adopts the injection molding sealing process to improve moisture resistance, prevent the oxidation of components, and prolong the service life of the product

- ◆ 具有防尘、防震、防挤压等防护功能

dust proof, shockproof, anti-squeezing and other protective functions

- ◆ 有完整的过充、过放、过流、短路、均衡功能

There are complete over charge, over-discharge, over-current, short circuit, equalization functions


- ◆ 采用集成化的设计，将采集、管理、通信等功能集成于一体

The integrated design integrates acquisition, management, communication and other functions into one

- ◆ 具有通讯功能，可通过上位机对过充、过放、过流、充放电过流、均衡、过温、欠温、休眠、容量等参数进行设置

With communication function, parameters such as over charge, over-discharge, over-current, charge-discharge over-current, equalization, over-temperature, under-temperature, sleep, capacity and other parameters can be set through the host computer

3.功能示意框图 Functional Schematic Block Diagram

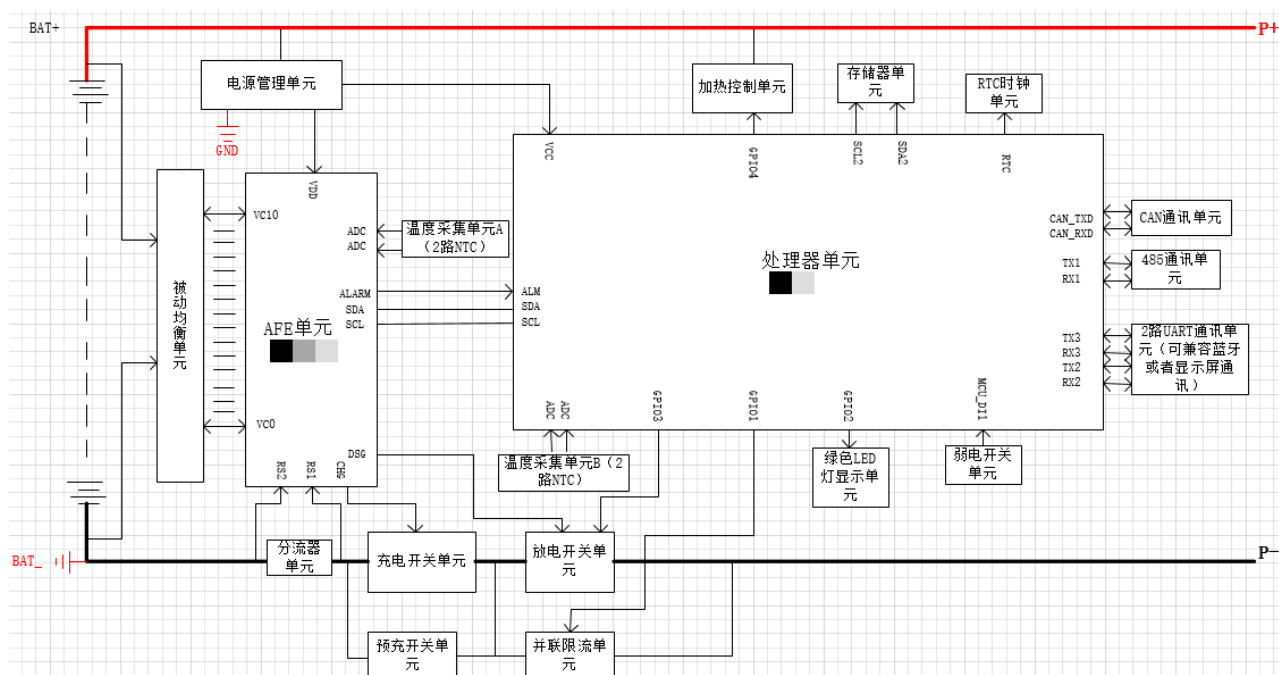

4.电气特性 Electrical characteristics

4.1 基本参数 Basic parameters

序号 No	检测内容 Test content		出厂默认参数 Factory default parameters	单位 Unit	备注 Remark
1	放电 Discharge	额定放电电流 Rated discharge current	40	A	30~60A
		过放保护总压 Over-discharge protection voltage	19.25	V	2.7*n (n 为电池串数 3~8)
		充电电压 Charging voltage	29.4	V	4.2*n (n 为电池串数 3~8)
	充电 Charging	额定充电电流 Rated charging current	40	A	0.5C
		均衡开启电压 Equalization turn-on voltage	4.0	V	可设置 Can be set up
2	被动均衡功能 Passive equalization function	均衡开启压差 Equalize opening differential pressure	20	mV	可设置 Can be set up
		均衡开启条件 Equilibrium On Condition	全部满足： All satisfied:		
			1.非放电情况下 Under non-discharge		
			2.达到设定均衡开启压差 Reach set equilibrium opening differential voltage		
			3.最高电压达到设定平衡开启电压		



			The maximum voltage reaches the set balanced opening voltage		
		均衡电流 Balance current	100±30	mA	
3	单体过充保护 Single Cell over-charge protection	单体过充 1 级告警电压 Single Cell over-charge level 1 alarm voltage	4.15 ± 0.05	V	可设置 Can be set up
		单体过充 1 级告警延时 Single Cell over-charge level 1 alarm delay	1 ± 0.8	S	
		单体过充 1 级告警恢复电压 Single Cell over-charge level 1 alarm recovery voltage	4.05 ± 0.05	V	
		单体过充 1 级告警恢复延时 Single Cell over-charge level 1 alarm recovery delay	1 ± 0.8	S	
		单体过充 2 级保护电压 Single Cell over-charge Level 2 protection voltage	4.25 ± 0.05	V	可设置 Can be set up
		单体过充 2 级保护延时 Single Cell over-charge level 2 protection delay	1 ± 0.8	S	可设置 Can be set up
		单体过充 2 级保护恢复电压 Single Cell over-charge level 2 protection recovery voltage	4.15 ± 0.05	V	可设置 Can be set up
		单体过充 2 级保护恢复延时 Single Cell over-charge level 2 protection recovery delay	1 ± 0.8	S	
		单体过充 3 级保护电压 Single Cell over-charge Level 3 protection voltage	4.30 ± 0.05	V	可设置 Can be set up
		单体过充 3 级保护延时 Single Cell over-charge level 3 protection delay	1 ± 0.8	S	可设置 Can be set up
		单体过充 3 级保护恢复电压 Single Cell over-charge level 3 protection recovery voltage	4.20 ± 0.05	V	可设置 Can be set up
		单体过充 3 级保护恢复延时 Single Cell over-charge level 3 protection recovery delay	1 ± 0.8	S	
4	单体过放保护 Single Cell over-discharge protection	单体过放 1 级告警电压 Single Cell over-discharge level 1 alarm voltage	2.8 ± 0.05	V	可设置 Can be set up
		单体过放 1 级告警延时 Single Cell over-discharge level 1 alarm delay	1 ± 0.8	S	
		单体过放 1 级告警恢复电压 Single Cell over-discharge level 1 alarm recovery voltage	2.9 ± 0.05	V	
		单体过放 1 级告警恢复延时 Single Cell over-discharge level 1 alarm recovery delay	1 ± 0.8	S	
		单体过放 2 级保护电压 Single Cell over-discharge level 2 protection voltage	2.7 ± 0.05	V	可设置 Can be set up
		单体过放 2 级保护延时 Single Cell over-discharge level 2 protection delay	1 ± 0.8	S	可设置 Can be set up
		单体过放 2 级保护恢复电压 Single Cell over-discharge level 2 protection recovery	2.8 ± 0.05	V	可设置 Can be set up



		voltage			
		单体过放 2 级保护恢复延时 Single Cell over-discharge level 2 protection recovery delay	1±0.8	S	
		单体过放 3 级保护电压 Single Cell over-discharge level 3 protection voltage	2.6±0.05	V	可设置 Can be set up
		单体过放 3 级保护延时 Single Cell over-discharge level 3 protection delay	1±0.8	S	可设置 Can be set up
		单体过放 3 级保护恢复电压 Single Cell over-discharge level 3 protection recovery voltage	2.7±0.05	V	可设置 Can be set up
		单体过放 3 级保护恢复延时 Single Cell over-discharge level 3 protection recovery delay	1±0.8	S	
5	充/放电过流保护 Charge/discharge over-current protection	放电过流 1 级告警电流 Discharge over-current level 1 alarm current	48±3%	A	可设置 Can be set up
		放电过流 1 级告警延时 Discharge over-current level 1 alarm delay	1±0.8	S	
		放电过流 2 级保护电流 Discharge over-current level 2 protection current	60±3%	A	可设置 Can be set up
		放电过流 2 级保护延时 Discharge over-current level 2 protection delay	1±0.8	S	可设置 Can be set up
		放电过流 3 级保护电流 Discharge over-current level 3 protection current	80±3%	A	可设置 Can be set up
		放电过流 3 级保护延时 Discharge over-current level 3 protection delay	0.5	S	可设置 Can be set up
		保护解除条件 Release condition	移除负载解除 Removing the load is lifted		
		充电过流 1 级告警电流 Charging over-current level 1 alarm current	48±3%	A	可设置 Can be set up
		充电过流 1 级告警延时 Charging over-current level 1 alarm delay	1±0.8	S	
		充电过流 2 级保护电流 Charging over-current level 2 protection current	60±3%	A	可设置 Can be set up
		充电过流 2 级保护延时 Charging over-current level 2 protection delay	1±0.8	S	可设置 Can be set up
		充电过流 3 级保护电流 Charging over-current level 3 protection current	80±3%	A	可设置 Can be set up
		充电过流 3 级保护延时 Charging over-current level 3 protection delay	0.5	S	可设置 Can be set up
		保护解除条件 Release condition	移除充电器解除 Remove the charger to release		
6	短路保护 Short circuit protection	短路保护条件 Short circuit protection conditions	外部负载短路 External load short circuit		
		短路保护延时 Short circuit protection delay	10~500	uS	实际以客户电池寄



		Short circuit protection delay			回我司测试为准 The actual test is subject to the customer's battery sent back to our company for testing
		短路保护解除 Short circuit protection released	移除负载解除 remove load release		
7	温度保护 Temperature protection	充电高温 1 级告警温度 Charging high temperature level 1 alarm temperature	60	°C	可设置 Can be set up
		充电高温 1 级告警温度延时 Charging high temperature level 1 alarm temperature delay	1±0.8	S	
		充电高温 2 级保护温度 Charging high temperature level 2 protection temperature	65	°C	可设置 Can be set up
		充电高温 2 级保护温度延时 Charging high temperature level 2 protection temperature delay	1±0.8	S	可设置 Can be set up
		充电高温 3 级保护温度 Charging high temperature level 3 protection temperature	75	°C	可设置 Can be set up
		充电高温 3 级保护温度延时 Charging high temperature level 3 protection temperature delay	1±0.8	S	可设置 Can be set up
		充电高温 1 级告警释放温度 Charging high temperature level 1 alarm release temperature	55	°C	
		充电高温 1 级告警释放延时 Charging high temperature level 1 alarm release delay	1±0.8	S	
		充电高温 2 级保护释放温度 Charging high temperature level 2 protection release temperature	60	°C	可设置 Can be set up
		充电高温 2 级保护释放延时 Charging high temperature level 2 protection release delay	1±0.8	S	可设置 Can be set up
		充电高温 3 级保护释放温度 Charging high temperature level 2 protection release temperature	65	°C	可设置 Can be set up
		充电高温 3 级保护释放延时 Charging high temperature level 2 protection release delay	1±0.8	S	可设置 Can be set up
		充电低温 1 级告警温度 Charging Low temperature level 1 alarm temperature	-30	°C	可设置 Can be set up
		充电低温 1 级告警温度延时 Charging Low temperature level 1 alarm temperature delay	1±0.8	S	
		充电低温 2 级保护温度 Charging Low temperature level 2 protection temperature	-35	°C	可设置 Can be set up
		充电低温 2 级保护温度延时 Charging Low temperature level 2 protection temperature delay	1±0.8	S	可设置 Can be set up



	充电低温 3 级保护温度 Charging Low temperature level 3 protection temperature	-40	°C	可设置 Can be set up
	充电低温 3 级保护温度延时 Charging Low temperature level 3 protection temperature delay	1±0.8	S	可设置 Can be set up
	充电低温 1 级告警释放温度 Charging Low temperature level 1 alarm release temperature	-25	°C	
	充电低温 1 级告警释放延时 Charging Low temperature level 1 alarm release delay	1±0.8	S	
	充电低温 2 级保护释放温度 Charging Low temperature level 2 protection release temperature	-30	°C	可设置 Can be set up
	充电低温 2 级保护释放延时 Charging Low temperature level 2 protection release delay	1±0.8	S	可设置 Can be set up
	充电低温 3 级保护释放温度 Charging Low temperature level 3 protection release temperature	-35	°C	可设置 Can be set up
	充电低温 3 级保护释放延时 Charging Low temperature level 3 protection release delay	1±0.8	S	可设置 Can be set up
	放电高温 1 级告警温度 discharge high temperature level 1 alarm temperature	65	°C	可设置 Can be set up
	放电高温 1 级告警温度延时 discharge high temperature level 1 alarm temperature delay	1±0.8	S	
	放电高温 2 级保护温度 discharge high temperature level 2 protection temperature	70	°C	可设置 Can be set up
	放电高温 2 级保护温度延时 discharge high temperature level 2 protection temperature delay	1±0.8	S	可设置 Can be set up
	放电高温 3 级保护温度 discharge high temperature level 3 protection temperature	75	°C	可设置 Can be set up
	放电高温 3 级保护温度延时 discharge high temperature level 3 protection temperature delay	1±0.8	S	可设置 Can be set up
	放电高温 1 级告警释放温度 discharge high temperature level 1 alarm release temperature	60	°C	
	放电高温 1 级告警释放延时 discharge high temperature level 1 alarm release delay	1±0.8	S	
	放电高温 2 级保护释放温度 discharge high temperature level 2 protection release temperature	65	°C	可设置 Can be set up
	放电高温 2 级保护释放延时 discharge high temperature level 2 protection release delay	1±0.8	S	可设置 Can be set up
	放电高温 3 级保护释放温度 discharge high temperature level 3 protection release	70	°C	可设置 Can be set up



		temperature			
		放电高温 3 级保护释放延时 discharge high temperature level 3 protection release delay	1±0.8	S	可设置 Can be set up
		放电低温 1 级告警温度 discharge Low temperature level 1 alarm temperature	-30	°C	可设置 Can be set up
		放电低温 1 级告警温度延时 discharge Low temperature level 1 alarm temperature delay	1±0.8	S	
		放电低温 2 级保护温度 discharge Low temperature level 2 protection temperature	-35	°C	可设置 Can be set up
		放电低温 2 级保护温度延时 discharge Low temperature level 2 protection temperature delay	1±0.8	S	可设置 Can be set up
		放电低温 3 级保护温度 discharge Low temperature level 3 protection temperature	-40	°C	可设置 Can be set up
		放电低温 3 级保护温度延时 discharge Low temperature level 3 protection temperature delay	1±0.8	S	可设置 Can be set up
		放电低温 1 级告警释放温度 discharge Low temperature level 1 alarm release temperature	-25	°C	
		放电低温 1 级告警释放延时 discharge Low temperature level 1 alarm release delay	1±0.8	S	
		放电低温 2 级保护释放温度 discharge Low temperature level 2 protection release temperature	-30	°C	可设置 Can be set up
		放电低温 2 级保护释放延时 discharge Low temperature level 2 protection release delay	1±0.8	S	可设置 Can be set up
		放电低温 3 级保护释放温度 discharge Low temperature level 3 protection release temperature	-35	°C	可设置 Can be set up
		放电低温 3 级保护释放延时 discharge Low temperature level 3 protection release delay	1±0.8	S	可设置 Can be set up
		温度保护解除条件 Temperature protection release conditions	达到恢复温度 The recovery temperature is reached		
		温度个数 Number of temperatures sensors	2	PCS	标配 2 个可扩展到 4 个用于电池, 1 个用于 MOS; Standard with 2 expandable 4 for batteries, 1 temp sensor for MOSFET
10	压差和温差告警 Differential voltage and temperature	压差过大 1 级告警 Level 1 alarm of excessive differential pressure	0.5	V	可设置 Can be set up
		压差过大 1 级告警延时	1±0.8	S	可设置



alarm	Excessive differential pressure level 1 alarm delay			Can be set up
	压差过大 2 级告警	0.8	V	可设置
	Excessive differential pressure Level 2 protection			Can be set up
	压差过大 2 级告警延时	1±0.8	S	可设置
	Excessive differential pressure level 2 protection delay			Can be set up
	压差过大 3 级告警	1	V	可设置
	Excessive differential pressure Level 3 protection			Can be set up
	压差过大 3 级告警延时	1±0.8	S	可设置
	Excessive differential pressure level 3 protection delay			Can be set up
	压差过大 1 级告警恢复	0.3	V	
	Level 1 alarm recovery of excessive differential pressure			
	压差过大 1 级告警恢复延时	1±0.8	S	
	Level 1 alarm recovery delay for excessive differential pressure			
	压差过大 2 级告警恢复	0.5	V	可设置
	Excessive differential pressure, level 2 protection recovery			Can be set up
	压差过大 2 级告警恢复延时	1±0.8	S	可设置
	Recovery delay of level 2 protection due to excessive differential pressure			Can be set up
	压差过大 3 级告警恢复	0.8	V	可设置
	Excessive differential pressure, level 3 protection recovery			Can be set up
	压差过大 3 级告警恢复延时	1±0.8	S	可设置
	Recovery delay of level 3 protection due to excessive differential pressure			Can be set up
	温差过大 1 级告警	10	℃	可设置
	Level 1 alarm of excessive temperature difference			Can be set up
	温差过大 1 级告警延时	1±0.8	S	
	Level 1 alarm delay for excessive temperature difference			
	温差过大 2 级告警	15	℃	可设置
	Level 2 protection for excessive temperature difference			Can be set up
	温差过大 2 级告警延时	1±0.8	S	可设置
	Temperature difference is too large 2-stage protection delay			Can be set up
	温差过大 3 级告警	20	℃	可设置
	Level 3 protection for excessive temperature difference			Can be set up
	温差过大 3 级告警延时	1±0.8	S	可设置
	Temperature difference is too large 3-stage protection delay			Can be set up
	温差过大 1 级告警恢复	5	℃	
	Temperature difference is too big 1 alarm recovery			
	温差过大 1 级告警恢复延时	1±0.8	S	
	Temperature difference is too large 1-level warning recovery delay			
	温差过大 2 级告警恢复	10	℃	可设置
	Temperature difference is too large 2-level protection recovery			Can be set up



		温差过大 2 级告警恢复延时 Temperature difference is too large 2-stage protection recovery delay	1±0.8	S	可设置 Can be set up
		温差过大 3 级告警恢复 Temperature difference is too large 3-level protection recovery	15	℃	可设置 Can be set up
		温差过大 3 级告警恢复延时 Temperature difference is too large 3-stage protection recovery delay	1±0.8	S	可设置 Can be set up
11	内阻 Internal impedance	主回路导通内阻 Main circuit on-resistance	<20	mΩ	
12	MOS 温度	高温 1 级告警温度 high temperature level 1 alarm temperature	90	℃	可设置 Can be set up
		高温 1 级告警温度延时 high temperature level 1 alarm temperature delay	1±0.8	S	
		高温 2 级保护温度 high temperature level 2 protection temperature	100	℃	可设置 Can be set up
		高温 2 级保护温度延时 high temperature level 2 protection temperature delay	1±0.8	S	可设置 Can be set up
		高温 3 级保护温度 high temperature level 3 protection temperature	110	℃	可设置 Can be set up
		高温 3 级保护温度延时 high temperature level 3 protection temperature delay	1±0.8	S	可设置 Can be set up
		高温 1 级告警释放温度 high temperature level 1 alarm release temperature	85	℃	
		高温 1 级告警释放延时 high temperature level 1 alarm release delay	1±0.8	S	
		高温 2 级保护释放温度 high temperature level 2 protection release temperature	95	℃	可设置 Can be set up
		高温 2 级保护释放延时 high temperature level 2 protection release delay	1±0.8	S	
		高温 3 级保护释放温度 high temperature level 2 protection release temperature	105	℃	可设置 Can be set up
		高温 3 级保护释放延时 Charging high temperature level 2 protection release delay	1±0.8	S	
13	消耗电流 Current consumption	标称电压工作时自耗电电流 Self-consumption current during nominal voltage operation	50	mA	不包含模块自耗 Not include module self-consumption
		休眠模式自耗电电流 Self-consumption current in sleep mode	800±50	uA	进入：无通讯、无电流、无钥匙信号 Entry: no communication, no current, no key signal
		休眠时间 Sleep time	3600	S	可设置 Can be set up



14	通讯接口 Communication Interface	☒ UART*2 ☒ RS485*1 ☒ CAN*1
15	外围配件 Peripheral accessories	☐ 蓝牙 Bluetooth ☐ WiFi ☐ 钥匙开关 Key switch ☐ GPS ☐ LCD ☐ 电量显示模块 SOC indicator
16	数据存储	☐ EEPROM 128Kb ☒ EEPROM 512Kb ☐ Nand Flash 4Gb
17	保护板尺寸 BMS size	长*宽*高 (mm) Long * Width * High (mm) 123*65*14
18	预充大小 (μF) Precharge size	☐ 4700 ☒ 10000 ☒ 22000 ☐ 33000

4.2 辅助模块参数 Auxiliary module parameters

序号 NO	名称 Name	电流 Current	是/否标配 Yes/No standard	备注 Remark
1	PACK 并联模块 Pack parallel module	☒ 1A 集成	是 yes	为了并联不损坏，内置恒功率 3W，最大电流 1A； For parallel connection without damage, Built in constant power 3W, maximum current 1A 如需大电流限流，需选择外挂模块； If you need high current limiting, you need to choose an external module.
		☐ 5A 外挂	否 no	
		☐ 15A 外挂	否 no	
2	加热模块 Heating Module	5~20A	否 no	1.当检测到电池最低温度低于 0℃时开始加热并断开充放电 MOS When it is detected that the battery minimum temperature is lower than 0° C, it starts to heat up and disconnects the charge and discharge MOS 2.当检测到电池最低温度高于 5℃时停止加热并恢复充放电 MOS When the battery minimum temperature is detected to be higher than 5° C, the heating is turned off and can be charged and discharged MOS

4.3 可靠性参数 Reliability parameters

序号 NO	项 目 Project	条 件 Condition
1	检测精度 Detection accuracy	电流检测精度 Current detection accuracy: $\leq (\pm 3\% \text{FSR})$ 电压检测精度 voltage detection accuracy: $\leq \pm 15\text{mV}$ (常温 $\pm 5@25^{\circ}\text{C}$) 温度检测精度 Temperature detection accuracy: $\leq 2^{\circ}\text{C}$ (常温)



		SOC 平均精度 SOC average accuracy: $\leq 10\%$ (全温) $\leq 5\%$ (常温)
2	信息存储 Information storage	最大存储 400 条 (标配 512Kb EEPROM) 履历信息, 含保护时间, 当前总电压、电流、温度、SOC、等 Stores up to 400 (Standard configuration 512Kb EEPROM) message of history information, including protection times, current total voltage, current, temperature, SOC, etc.
3	SOC 计量 SOC metering	采用电流积分法 (可以定制 OCV 修正) Using current integration method (OCV correction can be customized)
4	工作环境条件 Working environment conditions	工作温度:-40°C~85°C Operating temperature:-40°C~85°C
		相对湿度:5%~90%RH Relative humidity: 5%~90%RH
5	存储环境条件 Storage environment conditions	存储温度:-40°C~85°C Storage temperature: -40°C~85°C
		相对湿度:5%~75%RH Relative humidity:

5. 通信说明 Communication Description

默认为 UART 通讯, 可定制客户 RS485、CAN、UART 等通讯协议

The default is UART communication, and communication protocols such as RS485, CAN, UART, etc. can be customized

5.1 RS485 通信

默认达锂 RS485 通讯协议, 通过专用通讯盒与指定上位机进行通讯, 波特率默认为 9600bps。从而在上位机端察看电池的各种信息, 包括电池电压、电流、温度、状态、SOC、及电池生产信息等, 可授权登录后进行参数设置及相应控制操作, 支持程序升级功能。(本上位机适用于 Windows 系列平台的 PC 机)。

The default is up to the Daly RS485 communication protocol, which communicates with the designated host computer through a special communication box, and the default baud rate is 9600bps. Therefore, various information of the battery can be viewed on the host computer, including battery voltage, current, temperature, state, SOC, and battery production information, etc., parameter settings and corresponding control operations can be performed after login, and the program upgrade function can be supported. (This host computer is suitable for PCs of Windows series platforms).

5.2 CAN 通信

默认达锂 CAN 协议, 通信速率 250KB/S。

The default is Daly CAN protocol, and the communication rate is 250 kb/s.

5.3.蜂鸣器逻辑 Buzzer logic

在上位机配置蜂鸣器使能, 且蜂鸣器接在 DO1 口;

充放电温度到达 60 度 响声 1 秒 停止一秒 如此持续进行蜂鸣报警

Configure a buzzer to enable on the computer APP, and connect the buzzer to the DO1 port;



When the charging and discharging temperature reaches 60 ° C, the sound will stop for one second, and then the buzzer alarm will continue

5.4 灯语逻辑 Indicator logic

本产品有一盏绿色 LED 灯，对灯语状态如下表。

This product has a green LED light, and the status of the light is shown in the table below:

1	关机、断电、休眠 Shutdown, power outage, hibernation	灯灭 light off
2	工作中，放电状态 During operation, discharge status	灯闪，0.5s 亮，2.5s 灭，3s 为一个周期 The light flashes, turns on for 0.5 seconds, turns off for 2.5 seconds, and takes 3 seconds as a cycle
3	工作中，充电状态 Charging state during operation	灯闪，0.5s 亮，0.5s 灭，1s 为一个周期 The light flashes, turns on for 0.5 seconds, turns off for 0.5 seconds, and takes 1 second as a cycle
4	工作中，无充放电 No charging or discharging during operation	灯闪，0.5s 亮，9.5s 灭，10s 为一个周期 The light flashes, turns on for 0.5 seconds, turns off for 9.5 seconds, and takes 10 seconds as a cycle

5.5 钥匙开关逻辑 Keyswitch logic

支持 KEY 控制 MOS，分三种情况：

1、钥匙控制放电 MOS 管，2、钥匙控制放电 MOS 管与休眠，3、失能。控制逻辑为正逻辑，也可以支持 5V/12V/24 外部电源唤醒。

Support KEY control MOS, divided into three situations:

1. Key controlled discharge MOS tube, 2. Key controlled discharge MOS tube and sleep, 3. Deactivation. The control logic is positive logic and can also support 5V/12V/24 external power wake-up.

6. 上位机说明 PC software Description

PC 上位机 DALY BMS Tool V1.0.0 功能默认显示数据监控界面，登陆界面输入密码并连接上位机通讯后，显示数据监控，参数读写，生产制造，更多等界面。

手机 APP 设置保护参数，同步二级和三级保护。

- 1、解析各模块发送的数据信息，然后将电压、温度、配置值等显示出来；
- 2、通过上位机向各模块配置信息；
- 3、生产参数校准；
- 4、BMS 升级。

The DALY BMS-V1.0.0 function of the PC software displays the data monitoring interface by default. After entering a password and connecting to the upper computer for communication, the data monitoring, parameter reading and writing, production manufacturing, and more interfaces are displayed.

The mobile app sets protection parameters and synchronizes secondary and tertiary protection.


1. Analyze the data information sent by each module, and then display the voltage, temperature, configuration value, etc.;
2. Configure information to each module through the host computer;
3. Calibration of production parameters;
4. BMS upgrade.



7.保护板尺寸图 (接口仅供参考, 非常规标配, 详情请参考 7.1 接口引脚说明)

Dimensional drawing of BMS(interface for reference only, unconventional standard, please refer to 7.1 Interface pin specification)



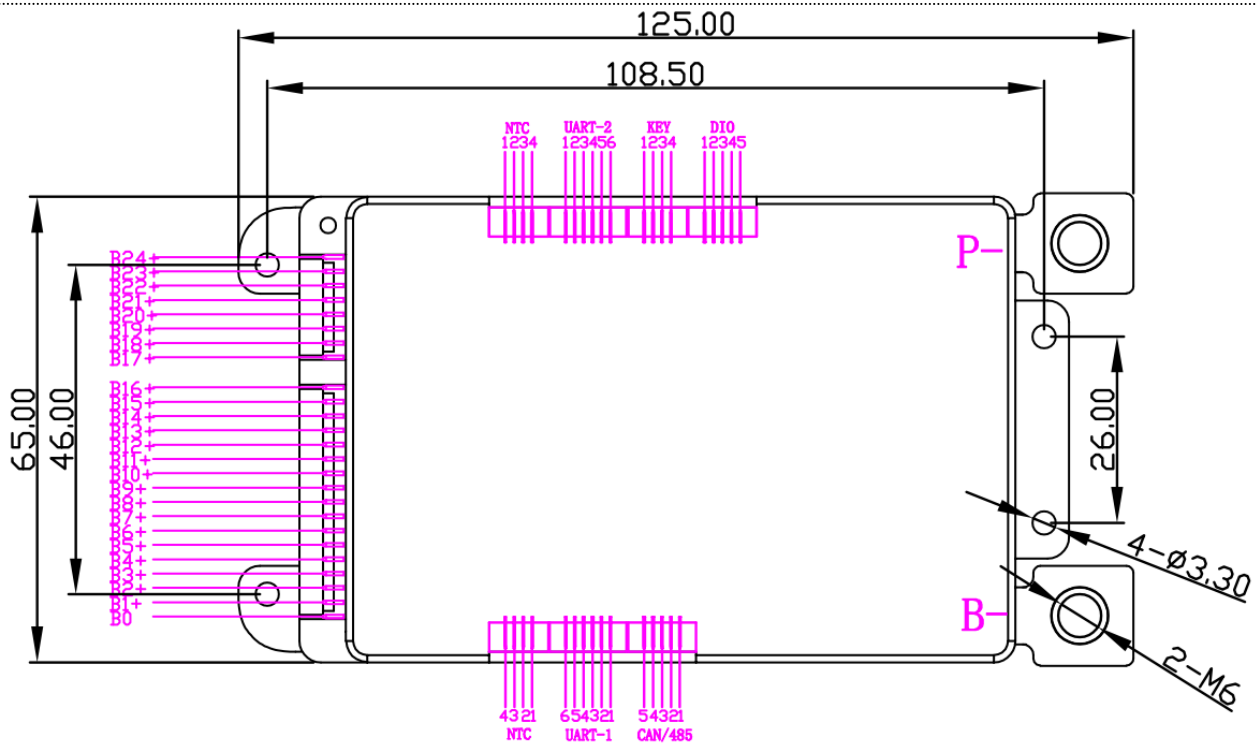

7.1 接口引脚说明 Interface pin instructions

接口名称 Interface name	Pin 脚	标号 Label	定义说明 Definition description
B-接口 (标配) B- interface Standard Parts	/	B-	电池总负, 接电池总负 Battery negative, connect to battery negative
P-接口 (标配) P- interface Standard Parts	/	P-	保护板充放电负极, 接充放电负端 The charge and discharge negative terminal of the protection board is connected to the negative terminal of the charge and discharge
采样线接口(标配) Sampling line interface Standard Parts PHB 2.0 8 Pin 带扣	1	B0	接第 1 节电池负级 Connect to the negative terminal of the first battery
	2	B1+	接第 1 节电池正级 Connect to the positive terminal of the first battery
	3	B2+	接第 2 节电池正级 Connect to the positive terminal of the second battery
	...	...	接最后 1 节电池正级 Connect the positive terminal of the last battery
NTC-A 接口 (标配) NTC-A interface Standard Parts GH1.25 4Pin	1	NTC-2	2#温度线 2 # Temperature line
	2	GND	地 GND
	3	GND	地 GND
	4	NTC-1	1#温度线 1 # Temperature line
Uart1	1	GND	地 GND



蓝牙/GPS/UART/LCD/ 电量 SOC 接口/主动均衡 (标配) Bluetooth/GPS/UART/L CD interface/SOC display/Active Balance Module Standard Parts GH1.25 6Pin	2	3.3V	供电电源 3.3V Power supply is 3.3V
	3	12V	供电电源 8-12V Power supply is 12V
	4	S1	激活按键 Activate button
	5	TX	通讯发送端 Communication sending end
	6	RX	通讯接收端 Communication receiving end
Uart2 蓝牙/GPS/UART/LCD/ 电量 SOC 接口 (选配) Bluetooth/GPS/UART/L CD interface/SOC display Optional Parts GH1.25 6Pin	1	GND	地 GND
	2	3.3V	供电电源 3.3V Power supply is 3.3V
	3	12V	供电电源 8-12V Power supply is 12V
	4	S1	激活按键 Activate button
	5	TX	通讯发送端 Communication sending end
	6	RX	通讯接收端 Communication receiving end
RS485/CAN 接口 (选配) RS485/CAN interface Standard accessories GH1.25 5Pin	1	485_B	485 通讯接收端 485 communication receiver
	2	485_A	485 通讯发送端 485 communication sender
	3	ISO_GND	隔离地 Isolation ground GND
	4	CAN_H	CAN 通讯高 CAN communication high
	5	CAN_L	CAN 通讯低 CAN communication low
NTC-B 接口 (选配) NTC-B interface Optional Parts GH1.25 4Pin	1	NTC-4	4#温度线 4 # Temperature line
	2	GND	地 GND
	3	GND	地 GND
	4	NTC-3	3#温度线 3 # Temperature line
KEY 接口 (标配) KEY interface Standard accessories GH1.25 4Pin	1	KEY+	钥匙开关正 Key switch positive
	2	TBD	/
	3	TBD	/
	4	KEY-	钥匙开关负 Key switch negative
DIO 接口 (选配) DIO parallel interface	1	DO1	12V ≤500mA DO
	2	GND	地 GND

Optional accessories GH1.25 5Pin	3	DI	预留 TBD
	4	GND	地 GND
	5	DO2	3.3V ≤200mA DO


7.2 主要线材说明

线材名称 Line name	默认规格 Default specification		
B- P-	M6_SC16-6_3512 L=100mm		
采集线 Collecting line	24AWG L=450mm (8PIN)		
NTC 线	28AWG L=250mm		
CAN/485 线	26AWG L=300mm		
Key 线	26AWG L=450mm		

7.3 采集与串数对应表 Collection and string number map

序号 No.	串数 Strings	采集线接口规格 collecting cable interface specification	采集线规格 collecting cable specification	采集线抽线 collecting cable cutting
1	3	PHB2.0 4pin with buckle	1007 24AWG L=300mm (4PIN) with buckle	/
2	4	PHB2.0 5pin with buckle	1007 24AWG L=300mm (5PIN) with buckle	/
3	5	PHB2.0 6pin with buckle	1007 24AWG L=300mm (6PIN) with buckle	/
4	6	PHB2.0 7pin with buckle	1007 24AWG L=300mm (7PIN) with buckle	/
5	7	PHB2.0 8pin with buckle	1007 24AWG L=450mm (8PIN) with buckle	/
6	8	PHB2.0 9pin with buckle	1007 24AWG L=450mm (9PIN) with buckle	/
7	9	PHB2.0 11pin with buckle	1007 24AWG L=450mm (11PIN) with buckle	抽掉 11P 中最后 1P 线 cutting the last cable of the 11PIN cable
8	10	PHB2.0 11pin with buckle	1007 24AWG L=450mm (11PIN) with buckle	/

8. 接线示意图 Wiring diagram

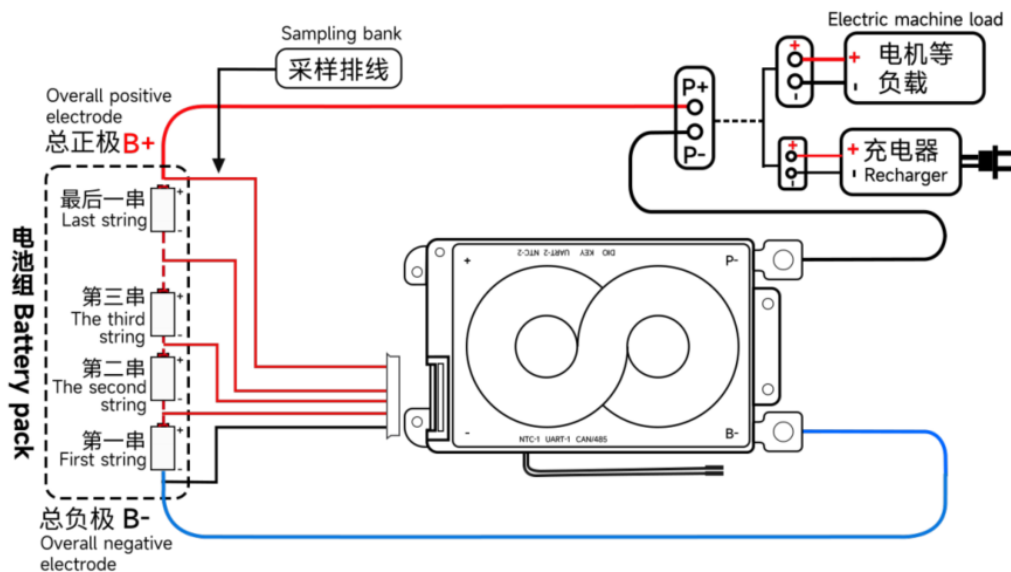



8.1 接线说明 Wiring Instructions

- 先将保护板 B-线到电池组总负极;
First connect the B- line of the protection board to the total negative pole of the battery pack
- 排线从细黑线连接 B-开始, 第 2 根线连接第 1 串电池正极, 后面依次连接每一串电池的 正极; 再把排线插入保护板;
The cable starts from the thin black wire connected to B-, the second wire is connected to the positive electrode of the first string of batteries, and the positive electrode of each string of batteries is connected in turn; then insert the cable into the protection board
- 接线完成后, 观察绿色指示灯是否工作, 连接蓝牙 APP 或 PC 上位机查看是否有故障告警, 测量电池 B+, B-电压与 P+, P-电压值是否相同, 相同即保护板工作正常; 否则请按照上面重新操作;
After the line is completed, Observe whether the green indicator light is working, connect the bluetooth APP or PC application to check for any fault alarms, measure whether the voltages of battery B+ and B- are the same as those of P+ and P-. The same means that the protection board is working normally; otherwise, please re-operate according to the above;
- 拆卸保护板时, 先断开负载电源开关并拔出排线 (如果有两个排线, 先拔高压排线, 再拔低压排线), 再拆 P-, 最后拆动力线 B-。
When removing the protection board, First disconnect the load power switch and unplug the ribbon cable (if there are two cables, first pull out the high-voltage cable, then pull out the low-voltage cable), and then Remove P -, and finally remove power line B.

8.2 接线注意事项 Wiring Precautions

- 软件板连接顺序
确认排线焊接无误之后, 并且把随产品的配件 (如: 温控标配/电量板选配/蓝牙选配/GPS 选配/显示屏选配/定做通讯接口选配) 安装在保护板上, 然后再把排线插入保护板插座; 保护板上面的蓝色 B-线接电池的总负极, 黑色的 P-线接在充放电的负极上面。

Software BMS connection sequence:

After confirming that the cable is welded correctly, install the accessories (such as: standard temperature control/power board option/Bluetooth option/GPS option/display option/custom communication interface option) on the protection board, and then insert the cable into the socket of the protection board; the blue B-line on the protection board is connected to the total negative pole of the battery, and the black P-line is connected to the negative pole of charge and discharge.

当 NTC 漏插入时, BMS 会产生故障, 不能进行正常的充放电。

When NTC fails to insert, BMS will malfunction and cannot perform normal charging and discharging.

参数修改

保护板的串数跟保护参数 (三元、铁锂) 在出厂的时候是有默认值的, 但是电池组的容量是需要按电池组的实际容量 AH 进行设置的, 若容量 AH 没有正确设置, 则剩余电量的百分比就会不准, 首次使用需充满 100%作为标定, 其他保护参数也可以根据客户自身需求进行设置 (不建议随意修改参数)。

Parameter modification:

The number of BMS strings and protection parameters (NMC, LFP, LTO) have default values when they leave the factory, but the capacity of the battery pack needs to be set according to the actual capacity AH of the battery pack. If the capacity AH is not set correctly, then The percentage of remaining power will be inaccurate. For the first use, it needs to be fully charged to 100% as a calibration. Other protection parameters can also be set according to the customer's own needs (it is not recommended to modify the parameters at will).

- 排线的接线方式参照背面的硬件保护板接线流程, 智能板 APP 修改参数出厂密码: 123456



For the wiring method of the cable, refer to the wiring process of the hardware protection board on the back. The smart board APP modifies the parameters. Factory password: 123456

9. 保修 Warranty

本公司生产的所有锂电池保护板，质保一年；人为因素导致损坏的，有偿维修

All lithium battery BMS produced by our company has a three-year warranty; if the damage caused by human factors, paid maintenance

10. 注意事项 Precautions

1. 不同电压平台的保护板不能混用，如三元类保护板不能使用铁锂电池上；

BMS of different voltage platforms cannot be mixed. For example, NMC BMSs cannot be used on LFP batteries.

2. 不同厂家的排线不通用，请确保使用我们公司配套排线；

The cables of different manufacturers are not universal, please make sure to use our company's matching cables

3. 在测试、安装、接触和使用保护板时，要做好防静电措施；

Take measures to discharge static electricity when testing, installing, touching and using the BMS

4. 不要使保护板的散热面直接接触电芯，否则热量会传送到电芯，影响电池的安全；

Do not let the heat dissipation surface of the BMS directly contact the battery cells, otherwise the heat will be transferred to the battery cells and affect the safety of the battery

5. 不可自行拆卸、更改保护板元器件；

Do not disassemble or change BMS components by yourself

6. 本公司保护板金属散热片进行了阳极氧化绝缘处理，氧化层破坏后仍会导电，组装作业

中避免散热片与电芯、镍带接触；

The company's protective plate metal heat sink has been anodized and insulated. After the oxide layer is damaged, it will still conduct electricity. Avoid contact between the heat sink and the battery core and nickel strip during assembly operations.

7. 如果保护板出现异常，请停止使用，等问题解决了再使用；

If the BMS is abnormal, please stop using it and use it after the problem is solved

8. 插拔针座连接线，注意按压卡扣位拔插，否则可能造成线材损坏；

Plug and unplug the connector cable, pay attention to press the buckle position to unplug and unplug, otherwise the wire may be damaged.

9. 保护板内置小功率并联能力，大电流并联请选择单独配件，串联使用需另行定制。

The BMS board has built-in low-power parallel connection capability. For high current parallel connection, please choose a separate accessory. For series connection, it needs to be customized separately.

10. 当电池为 3、4 串三元时，保护板的 Uart 及 DO 的 12V 电压不会稳压输出，跟根据电池总压变化，实际电压值会略低于电池总压。故欠压时，涉及的 12V 输出的配件会因供电不足而无法使用，例如 WIFI 模块、4G 模块等；

When the battery is 3、4 strings of Li-ion, the 12V voltage of the Uart and DO of the BMS does not regulate the voltage output, and the actual voltage value will be slightly lower than the total

地址：东莞市松山湖区工业南路 14 号天安云谷 7 号楼 21 层 电话：0769-82822953

Address: 21 / F, building 7, Tian'an Yungu, No. 14, Gongye South Road, Songshanhu District, Dongguan TEL: 0769-82822953



battery voltage according to the total battery voltage change. Therefore, in the case of undervoltage, accessories with 12V output will be unable to be used due to insufficient power supply, such as WIFI module, 4G module, etc.

11.特别说明 Special Note

我司产品进行严格的出厂检验测试，但是因为客户使用的环境不同（特别是在高温、超低温、太阳下等），难免会出现保护板故障，所以客户在选择和使用保护板时，需要在友好的环境下使用，及选择一定冗余量的保护板。

Our products undergo strict factory inspection and testing, but due to the different environments used by customers (especially in high temperature, ultra-low temperature, under the sun, etc.), it is inevitable that the protection board will fail. Therefore, when customers choose and use BMS, they need to be in a friendly environment, and select a BMS with a certain redundancy capability.



产品更改说明

Product change Instructions

版本 (Version)	更改内容 (Change content)	更改原因 (Reason for change)	更改日期 (Change date)	备注 (Remarks)
A0				
A1	修改尺寸图、温 度保护参数、4 串及低压时 12V 的说明	原尺寸图缺少 B-P- ，标准参数更新， 补充 4 串铁锂低压 使用说明	2023/3/18	
A2	更新 100A 的尺 寸图、增加采集 与串数对应表	变更 100A 尺寸， 补充不用串数对应 的线	2024/4/18	
A3	修订接口描述	主动均衡定义接口 UART1	2024/5/2	